

HotWire™ Under Tile Heating Specifications • Thermostat HWTH1

The thermostat offers both 7 day programming (the thermostat will do the same thing every day) and 5 + 2 day programming (the thermostat can have different programming on the weekends). Alternatively you can program each day differently.

The thermostat can operate on both room and floor temperature. Floor temperature offers the most economical method of operation and is therefore recommended.

- Stylish design
- User friendly
- High quality
- Quick and easy installation
- Contact rated 16A
- 4 daily programmes
- Disk battery will provide programming backup when there is a power outage. The disk battery will last approximately 10 years.
- Manual mode/ auto mode available



HWTH1

Technical Data

Operating voltage: AC 220...240 V

Frequency: 50 or 60 Hz

Max load: 16A

Setpoint range: 5 - 30 °C(ambient); 5 - 40 °C(floor)

Weight: 0.25 kg

Working Temperature: 0...+50 °C

Relative humidity: <95%

Storage Temperature: -20...+50 °C

Degree of protection: IP20

Colour: white

HOTWIRE
UNDER TILE HEATING

verve DISTRIBUTION

THE HEATING COMPANY
THC

Australia

Verve Distribution
Po Box 494
6 / 81 Brighton Rd
Glenelg SA 5045

www.vervedistribution.com.au

New Zealand

The Heating Company
PO Box 420
Whitianga NZ

www.hotwire.co.nz