


# HWTS1 WIFI WIRING INSTRUCTIONS

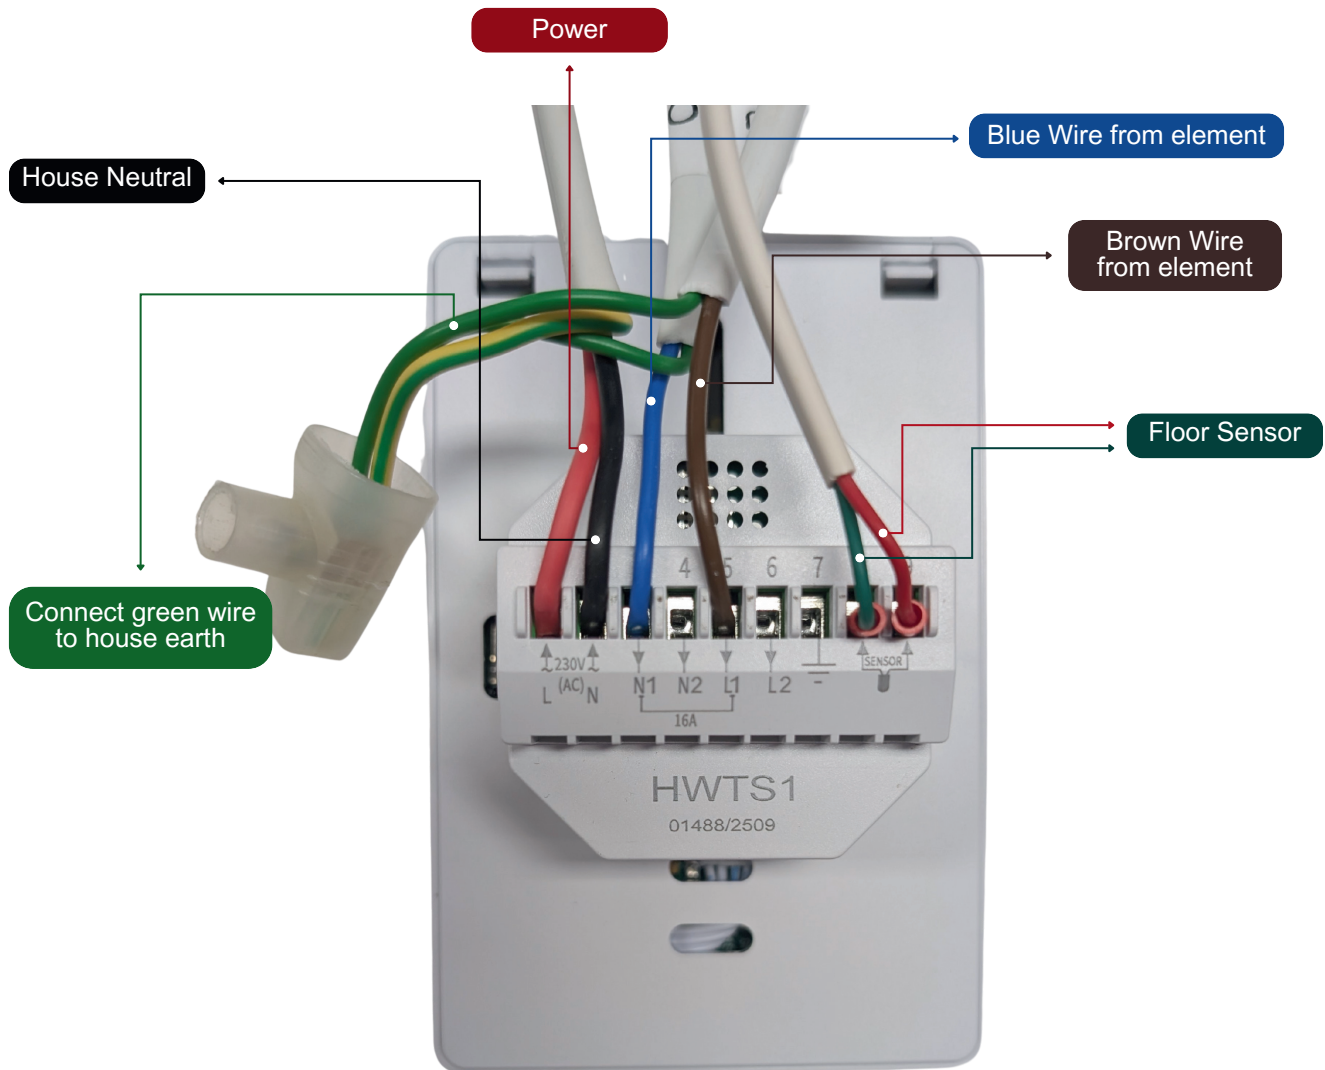

**Step 1:** Insert a small flathead screwdriver into the slot at the bottom of the screen. Gently separate the front from the back. Carefully unplug the ribbon connector.

**Step 2:** Connect the Thermostat according to the Wiring Instructions.

**Step 3:** Mount and reassemble the Thermostat: Screw the thermostat to the fixing plate in the holes provided.

**Step 4:** Return the face plate to its original position by pressing firmly.